



PLAN - NATURAL STONE PATTERN

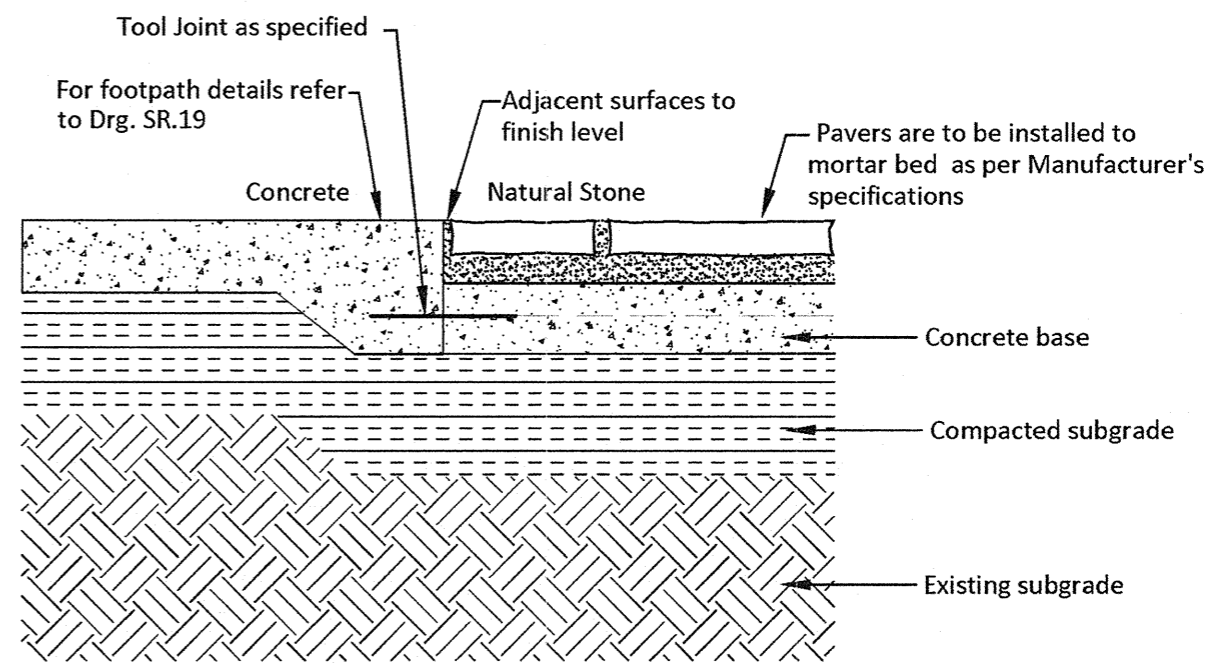

SECTION - CONCRETE TO NATURAL STONE

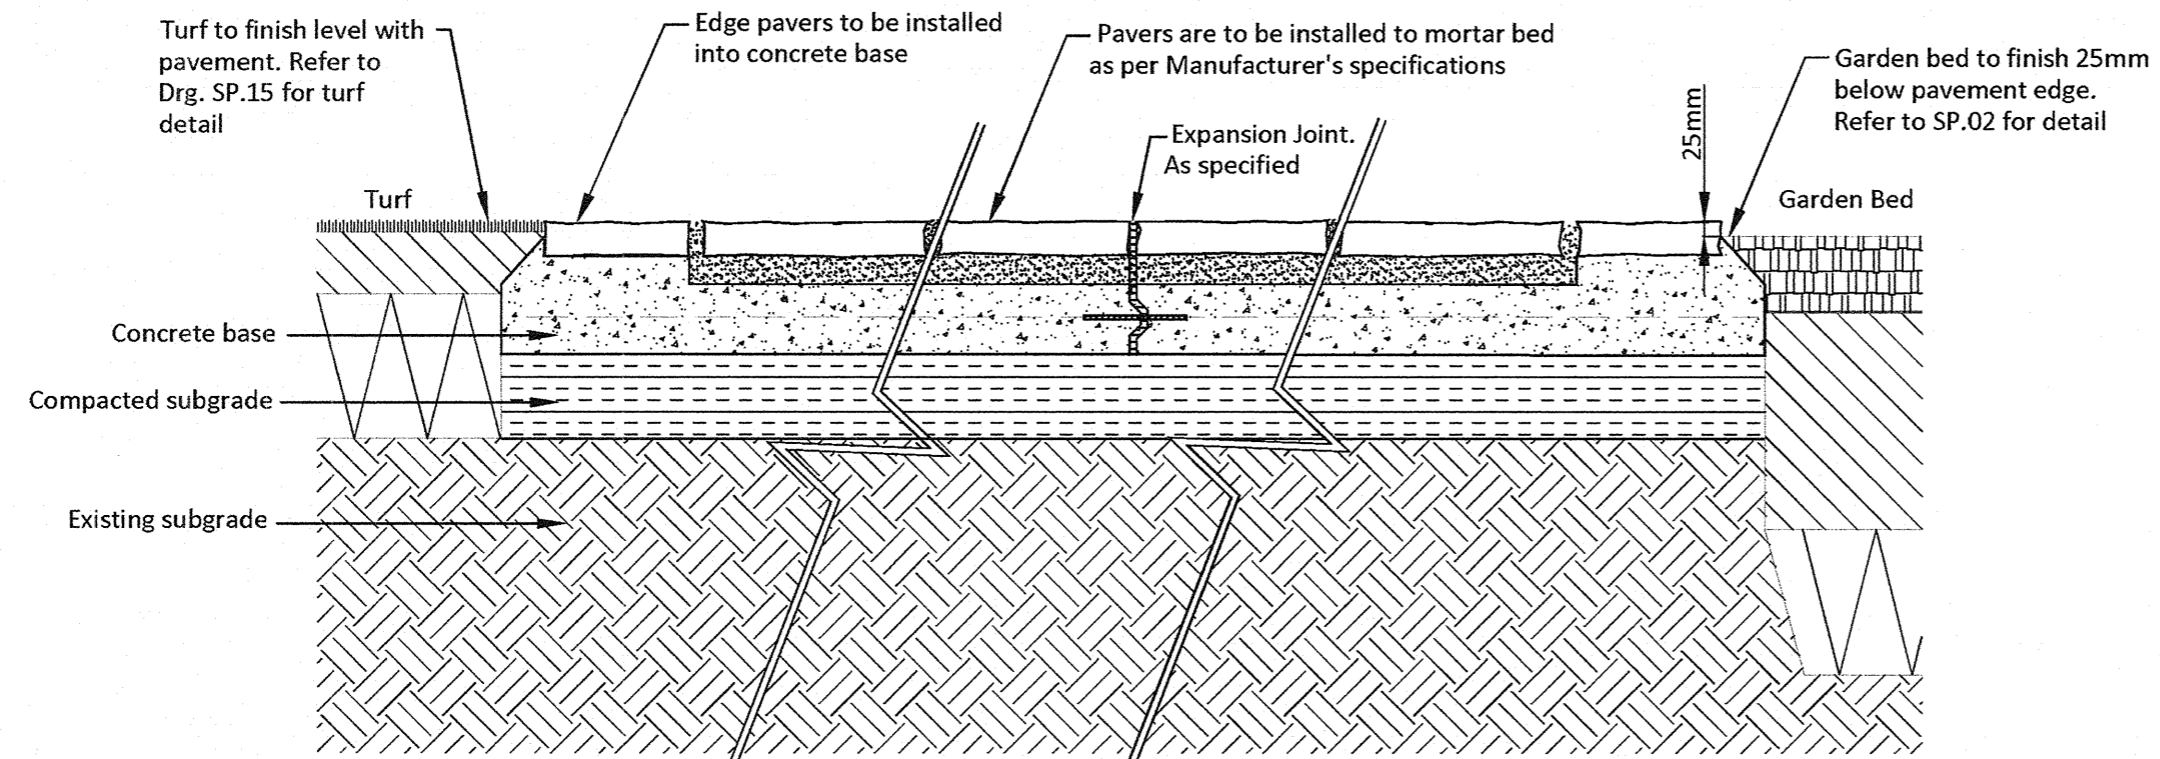

SECTION - TURF TO NATURAL STONE TO GARDEN BED

NOTES:

1. Install natural stone on concrete base to Manufacturer's instructions. Ensure concrete base, joints and mortar meet Manufacturer's and surface use requirements.
2. Where garden beds drain to wards paving, drainage will be required. Refer to Drg. SP.02 for drainage details.
3. Control Joint:  
Place at 1.5m x path width increments. Install to 1/4 depth of slab thickness.
4. Tool Joint:  
N12 dowels 400mm long to be installed at 900mm increments.
5. A min 1% fall is to be achieved across paved area to prevent water ponding.

REVISIONS					
AMENDMENT	INITIALS	DATE	AMENDMENT	INITIALS	DATE
F				L	
E				K	
D				J	
C	Notes Altered			I	
B	Notes Altered			H	
A	ORIGINAL ISSUE			G	

**IPSWICH CITY COUNCIL**  
 45 Roderick St  
 P.O. Box 191  
 Ipswich QLD 4305  
 Australia

Tel (07) 3810 7894  
 Tel (07) 3810 7927  
 Fax (07) 3810 7950

APPROVED  
  
 CHIEF OPERATING OFFICER (WPR)  
 DATE 29-7-13

**STANDARD DRAWING**  
**PAVEMENT - NATURAL STONE ON CONCRETE SLAB**

PARKS  
**SP.38**  
 REV: C DRAWER: 100